


Quick Start Guide

- 1 Log in to Mobil ServSM Lubricant Analysis to submit engine data. Then register scrapedown samples by scanning QR codes on bottle labels.

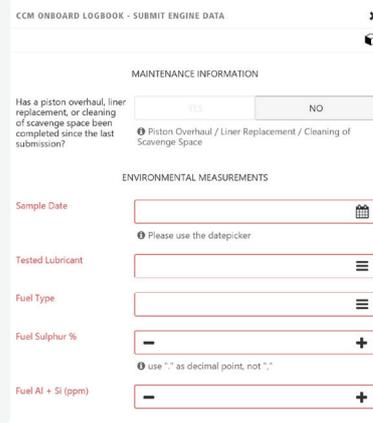

- 2 Press the power button on the lower left-hand corner of the front of the analyzer to turn it on.




- 3 Remove the sample bottle cap from sample bottle. Then install the AccuCap on the sample bottle.



- 4 Once the main screen has appeared, the analyzer is ready to measure.

Using the bar code scanner on the right-hand side of the instrument, scan the QR code on the sample bottle.

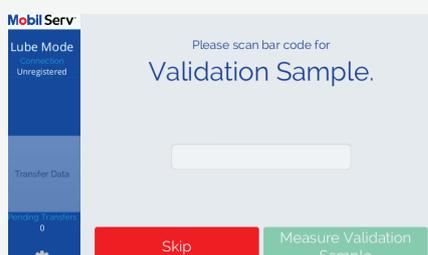

5 Open the sample chamber lid and insert the sample bottle into the sample basket upside down.




Once fully inserted, close the sample chamber lid.




6 To start a batch, measure the samples in the following order:


1. Validation sample
2. Fresh cylinder oil sample
3. Scrapedown samples.

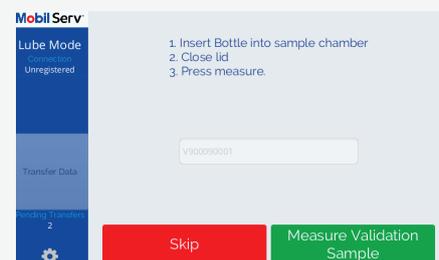


7 First measure the Validation and Day Tank/Fresh cylinder oil sample.

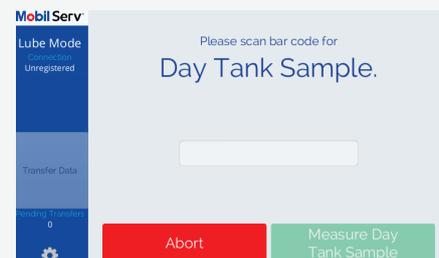

8 Then measure all of the cylinder scrapedown samples.

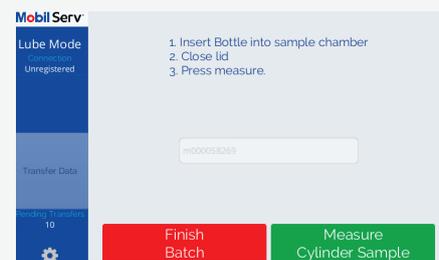

9 After every successful measurement, select 'Submit'.

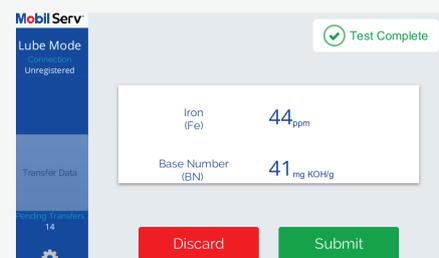

10 When the last scrapedown measurement has completed, select 'Submit Batch'.