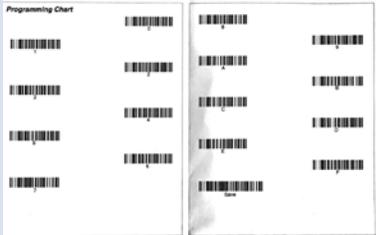


# Mobil Serv™ Lubricant Analysis – Scanner setup

The purpose of this document is to provide instructions to setup your new Mobil Serv Lubricant Analysis QR/barcode scanner if necessary. Skip this step if you are using an English keyboard language.

**Note: If your scanner does not work properly and enters a text string that the Mobil Serv application cannot process, you may want to follow the steps below.**

Step	Action	Example. Ref
1	Connect the QR/barcode scanner to the USB port of your PC	
2	The scanner should light up or make a sound that goes "beep"	
3	To allow the use of a non-US English language keyboard, the QR/barcode scanner settings have to be changed.  Please refer to the Quick Start Guide of the Honeywell Voyager 1450g Series that comes with the QR/barcode scanner kit	
4a	In the Quick Start Guide, refer to the section <b>Keyboard Country:</b> <ul style="list-style-type: none"> <li>Scan the barcode <b>Program Keyboard Country</b></li> </ul>	
4b	<ul style="list-style-type: none"> <li>Scan the numeric bar code(s) of the selected country by referring to the <b>Programming Chart</b> below</li> </ul> <p>For example: If the selected country is Russia, which is "26" on the programming chart. Scan the numeric bar code "2" followed by the numeric bar code "6"</p>	
4c	<ul style="list-style-type: none"> <li>Scan the <b>Save</b> bar code to complete the program of the keyboard</li> </ul>	
5	<p>Congratulations! You have programmed the QR/barcode scanner to your keyboard language.</p> <p>If you have other questions? Contact us at <a href="mailto:mobilservmarine@exxonmobil.com">mobilservmarine@exxonmobil.com</a></p>	

**Programming Chart**

<b>Country Code</b>	<b>Scan</b>
Belgium	1
Brazil	16
Bulgaria	53
Canada (French)	18
Croatia	32
Czech	15
Denmark	8
Dutch (NL)	11
Finland	2

France	3
Germany	4
Greek	17
Italy	5
Japan	28
Latvia	42
Latin America	14
Norway	19
Poland	20
Romania	25

Russia	26
Spain	10
Sweden	23
Tatar	85
Turkey	27
Ukrainian	76
UK	7
US	30